
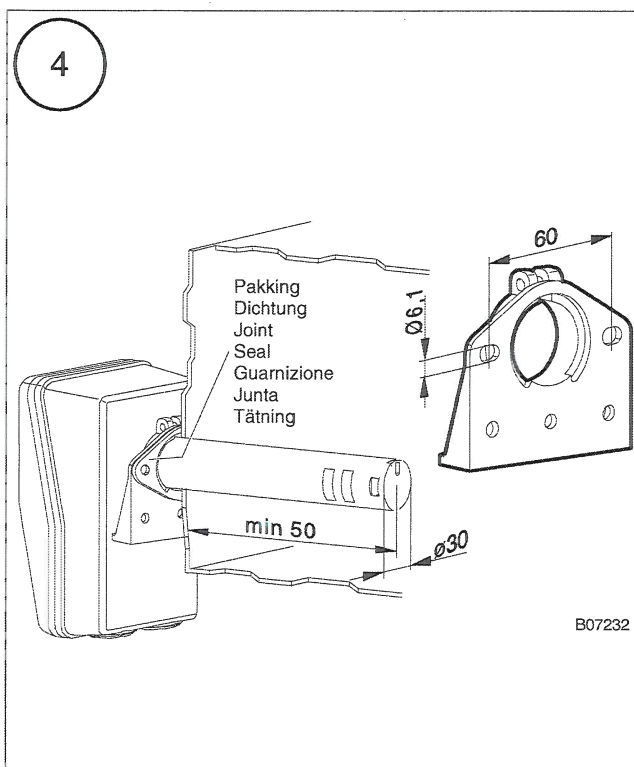
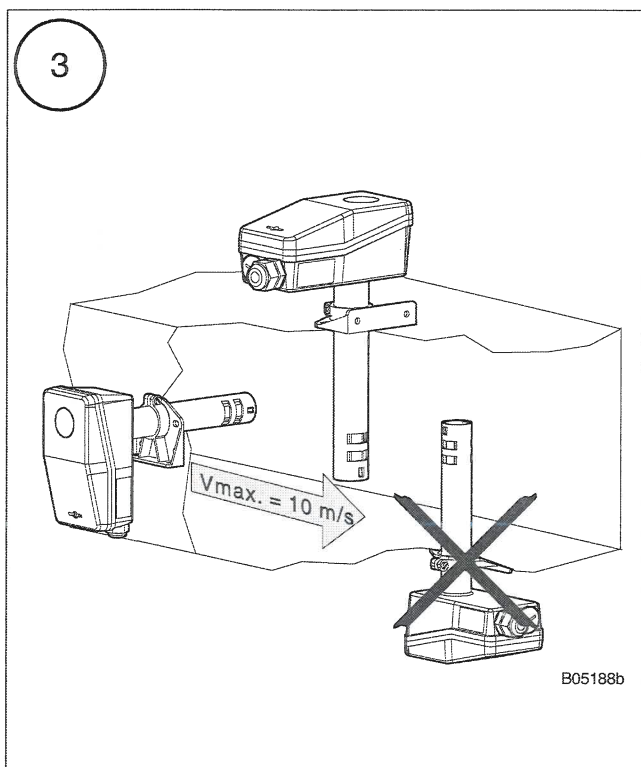
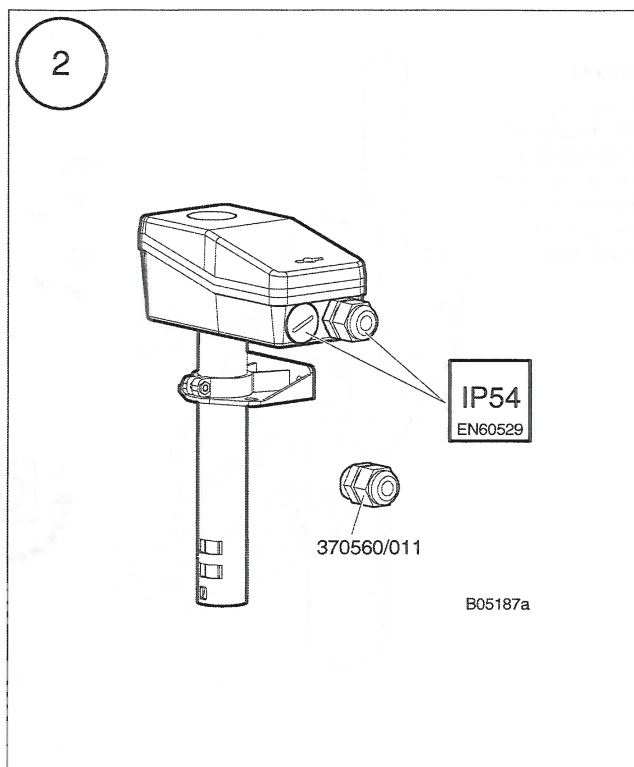


Y02196


Voor toepassing in normale omgeving
 Für den Einsatz in üblicher Umgebung
 Pour usage dans un environnement normal
 For use in normal environments
 Per impiego in ambiente usuale
 Para el uso en ambiente normal
 För användning i normal miljö

Montagevoorschrift
 Montagevorschrift
 Instructions de montage
 Fitting instructions
 Istruzioni di montaggio
 Instrucciones de montaje
 Monteringsanvisning

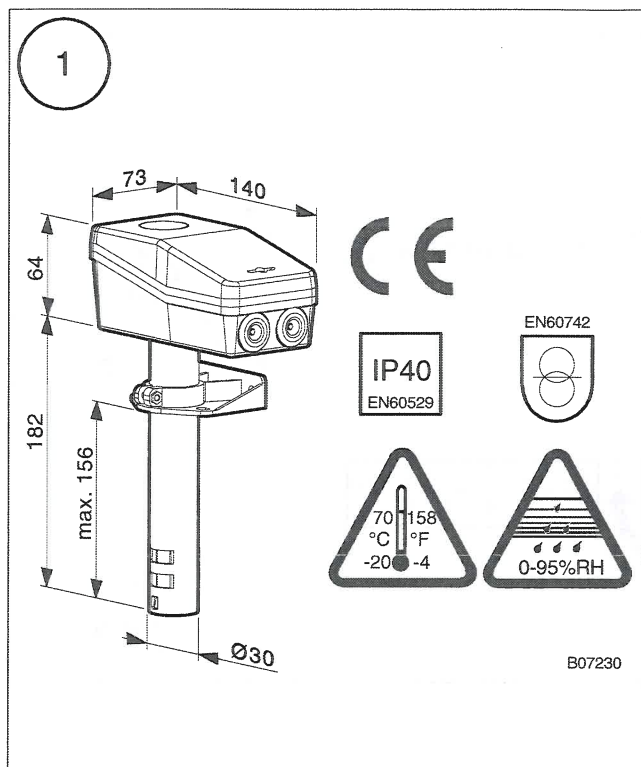


5

KTVO 999N

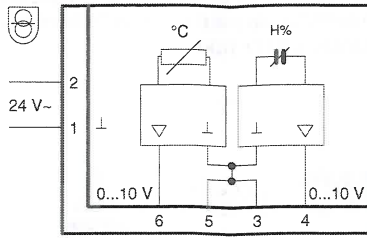


A02168b

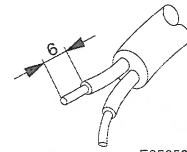



E05056

zero

- Na-ijking
- Nachjustierung
- Rééталonage
- Re-adjustment
- Reritaratura
- Reajustado
- Justering

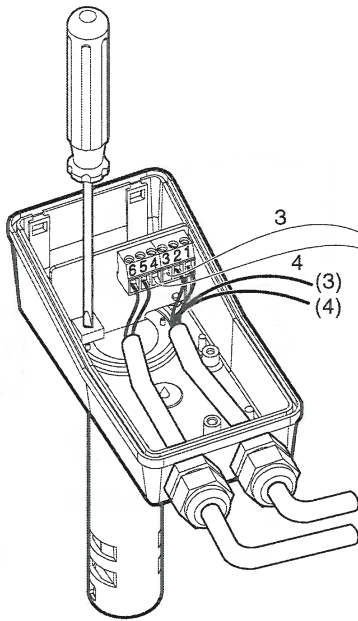

$$U = 0,1 \text{ H\% [V]}$$

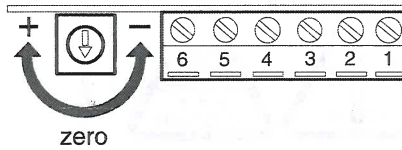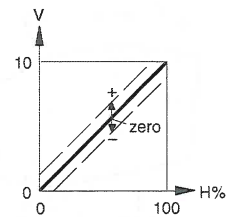

B05192a